

GS seat


User instructions

EN




Remove the seat's back cover to reach the tool pouch and to make the adjustments A–C.

4 mm Hex key
6 mm Hex key

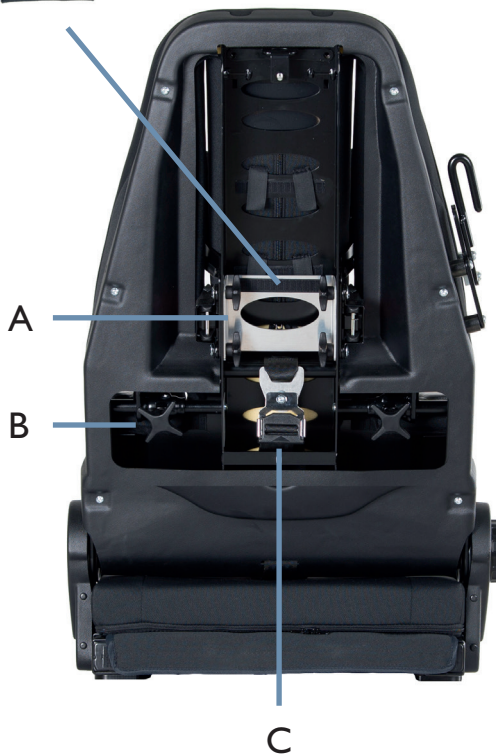

Loosen the knobs, or the screws using the supplied Hex keys, adjust and tighten again.

- A Vertical position of the headrest and shoulder harness. (*knobs*)
- B Horizontal position of the torso support and armrests. (*knobs*)
- C Loosen the pelvic belt by lifting the buckle. Pull the free end of the belt to tighten.
- D The side supports of the headrest can be adjusted by bending them inwards or outwards.
- E Vertical position of the belt deflector. (*4 mm*)
- F To move the belt deflector to the other side of the seat: Unscrew and use the corresponding holes on the other side of the seat to reattach the belt deflector. (*4 mm*)
- G Vertical position of the armrests. (*4 mm*)
- H Adjust the angle of the armrests by turning the adjustment screws.
- I Vertical position of the torso supports. (*4 mm*)
- J The depth of the seat. (*6 mm*)
IMPORTANT: Retighten the screws firmly! 
- K Horizontal position of the thigh supports. (*knobs*)
- L Vertical position of the footrests. (*knobs*)