



Emergency operation




Damage can occur if the seat is lifted when outside the 45-113 degrees angle, see further information in user manual.

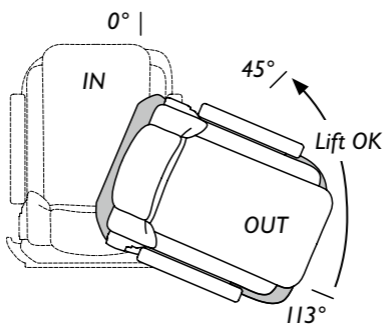


Crank clockwise in back of unit to lift up the seat

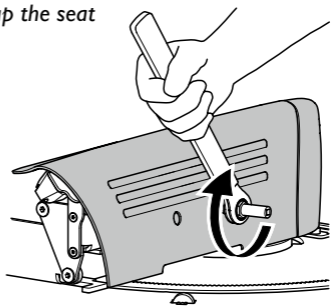



Pull yellow tab in front of unit to release the swiveling

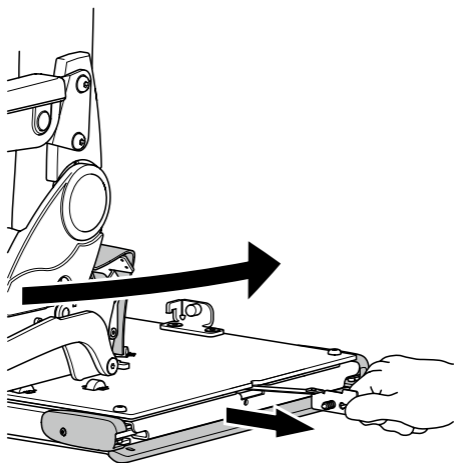

Crank counter clockwise in back of unit to adjust lengthwise

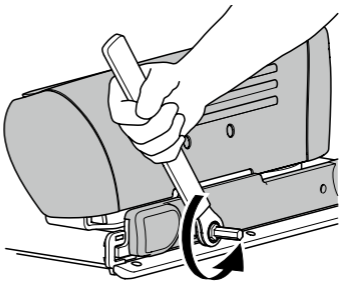

422979-1 2019/04

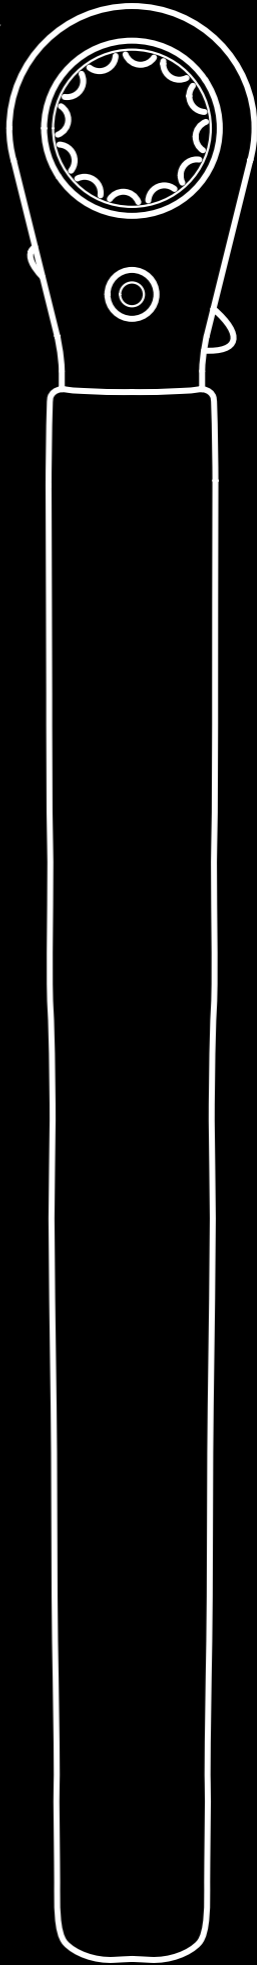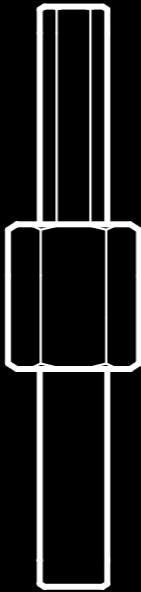

 BraunAbility®